
STANLEY®

72L GENERAL PURPOSE WHEELBARROW POLY POURER TUB ASSEMBLY GUIDE

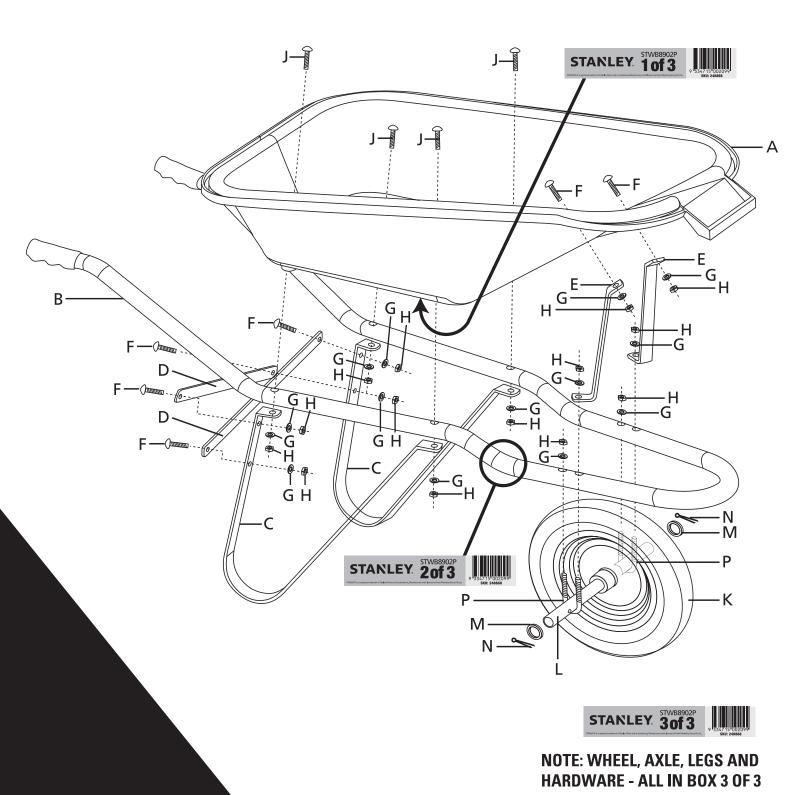

PARTS LIST

Part	Description	Qty	Part	Description	Qty
А	Poly Tub (labelled 1 of 3)	1	В	Handle Frame (labelled 2 of 3)	1
The following are all in carton labelled 3 of 3					
С	Curved leg frame	2	D	Flat leg bar	2
E	Tub stays	2	F	8 x 28mm bolts	6
G	8mm Flat washers	14	Н	8mm Nylok nuts	14
J	8 x 55mm Bolts	4	К	Wheel (4.00 x 8)	1
L	20mm Axle	1	М	20mm Washers	2
N	3 x 40mm Split pins	2	Р	Axle 8 x 25 x 70mm "U" bolts	2

ASSEMBLY GUIDE

- 1. Position the 2 curved leg frames (C) and the 2 flat leg bars (D) and assemble using 4pcs bolt (F), washer (G) and Nylok nut (H). Do up finger tight.
- 2. Position the tub (A), handle frame (B) and the assembled leg frame in order.
- 3. Position and push 1 bolt (J) through all items.
- 4. Place a washer (F) and secure with a Nylok nut (G). Do up finger tight.
- 5. Now position and push the other 3 bolts (J) through all items, then place a washer (G) and secure with a Nylok nut (H) and each bolt (J). Do up finger tight.
- 6. Attached the 2 tub stays (E) to the poly tub (A) using bolts (J), washers (G) and Nylok nuts (H). Do up finger tight.
- 7. Position and secure the 2 axle "U" bolts (P), and secure using washers (G) and Nylok nuts (H). Do up finger tight. NOTE: Each tub stay in is positioned on the front leg of the "U" bolt (P) before securing with the washer (G) and Nylok nut (H). Do up finger tight.
- 8. Position the axle (L) through the "U" bolt (P), wheel (K) and "U" bolt (P).
- 9. At each end of the axle (L) place the washer (M) and secure with a split pin (N). Open and rotate the longer leg on the split pin (N) so that it is secure.
- 10. To finish you will need to tighten all bolts and nuts, using a screw driver and a spanner.
- 11. Check tyre pressure should be no more than 20PSI.

Note: Periodically check all bolts and nuts for tightness, if required tighten. Periodically check the tyre pressure and if required pump up, never inflate above 20PSI.